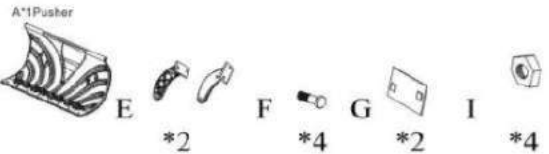
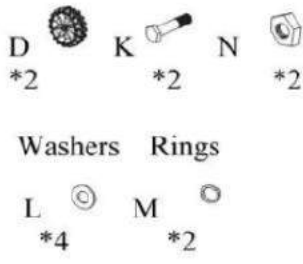
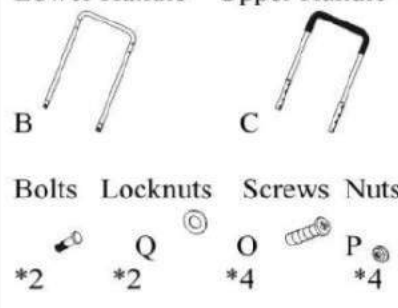



ROLLING SNOW PUSHER

RIC-167

<u>Blade</u>	<u>Wheels</u>	<u>Handle</u>
Arms Bolts Plates Locknuts	Wheels Bolts Nuts	Lower Handle Upper Handle
 E *2 F *4 G *2 I *4	 D *2 K *2 N *2 L *4 M *2	 B C Bolts Locknuts Screws Nuts *2 *2 *4 *4


Step 1: Blade Assembly:

Install the arms (E) in the back of the shovel –silver part facing inward- and secure them with the plates (G), screws (F) and locknut (I) as shown in the picture below:

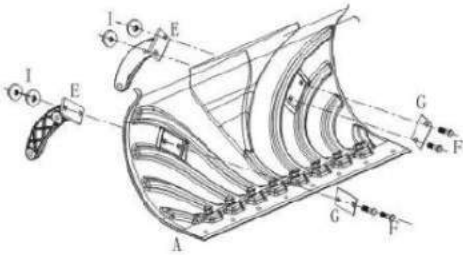


Step 2: Wheels Assembly:

Install the wheels (D) on the arms using the bolts (K). The washers (L) are to be placed both sides the of the wheels. The ring (M) needs to be placed between the arm and the locknut (N), as shown in the picture below:

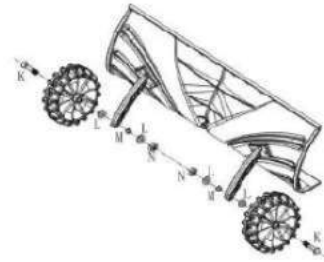

Step 3: Handle Assembly:

1. Install the lower handle (B) connecting to the inside of the arms of the blade using bolts (H) and locknuts (Q). 2. Attach the upper handle with screws (N) and secure with nuts (P). This part is height adjustable by mounting in higher or lower holes.

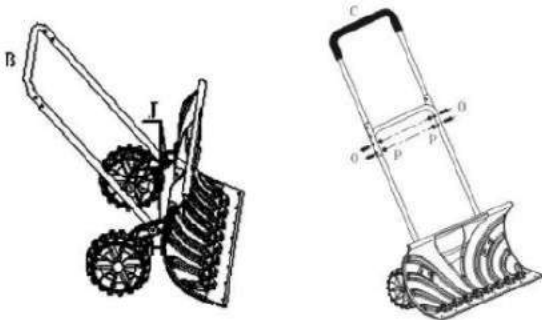

Finished product:



Thank you for choosing CASL Brands. If you have any questions, comments or concerns feel free to contact us by phone at: **888-881-4668**, by email: customerservice@serenityhealth.com, or you could also email us via our contact us page at www.SerenityHealth.com/contact-us/.

We stand behind our brand and the quality of the items we sell. We will send new parts, or replace products at our discretion within the one-year warranty period. Before we can help, you will need to provide proof of purchase with the date of purchase and photos of the defective merchandise. We will use the photos to determine the cause of defect and for future quality control.