


For best results, locate a suitable site for your fountain that is leveled and provides pleasing viewing angles.
 Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

5705F12

1. Locate a suitable site for your Three Tier Renaissance In Valencia Fountain, 10 pc. Site should be level and provide a pleasing viewing angle. You should always follow local electrical codes and use a 110V GFCI protected outlet.
2. Locate the 6504 Pool in the center of your site. Bowl must be level.
3. Place P500 Pump next to Standpipe. Slip pump cord through standpipe and pull cord out from bottom of pool. Seal cord with RS1.5 rubber stopper and corks. Corks will be remove if order AB8740 lights.
4. Connect BUSHING 1/2" X 3/8" to pump. Connect NKT3/4" X 36" Tubing to Bushing from Pump. Use CLAMP MEDIUM SS to secure it.
5. As you set 7708 Pedestal in center of Pool feed Tubing through 7772 Pedestal. Measure between other side of base and the pool wall to make sure the base is centered. Do the same with 6708 Bowl as you place it over the 7708 Pedestal. Level 6708 with Shims if necessary and add CAULK TAPE (SEE ILLUSTRATION).
6. Pull Tubing as much as you can and feed Tubing through STP1 X 8" Stand Pipe and connect to 6708 Bowl.
7. Connect NKT3/4" X 36" Tubing to TEE3/4" X 3/4" X 1/2". Use CLAMP MEDIUM SS to secure Tubing. Then connect the other NKT3/4" X 36 Tubing and the NKT1/2" X 1/2" Tubing to the other ends of Tee. Use CLAMP #56 and CLAMP #38 to secure other Tubing. Slip R1 Restrictor to the NKT1/2" X 12" Tubing (SEE ILLUSTRATION).
8. As you place 7707 Pedestal over 6708 feed tubing through the 7707 Pedestal. Do the same with 6706 Bowl as you place it over the 7707 Pedestal. Level 6706 with Shims if necessary and add use CAULK TAPE (SEE ILLUSTRATION).
9. Feed Tubing through STP1 X 6" Stand Pipe and connect to 6706 Bowl.
10. As you place 7705 Pedestal over 6706 Bowl feed tubing through 7705 Pedestal. Do the same when placing the 6705 Bowl over the 7705 Pedestal. Level 6705 Bowl with Shims if necessary and add use CAULK TAPE. Seal Tubing with Caulk Tape between Tubing and 6705 Bowl.
11. As you place 5705 Finial on top of the 6705 Bowl feed tubing through 5705.
12. If water flow too much cut or push down Tubing from the 5705 Finial. Don't want to restrict water flow, as you won't get enough water for bowls. Start Tubing inside the middle of 5532 and lower or rise to your liking on water spurt of the 5705 Finial.
13. Fill Bowl and pool with water. Plug pump into 110V GFCI protected outlet.
14. Finally, place the four 9024 Surround Sections around the fiberglass pool and align evenly.

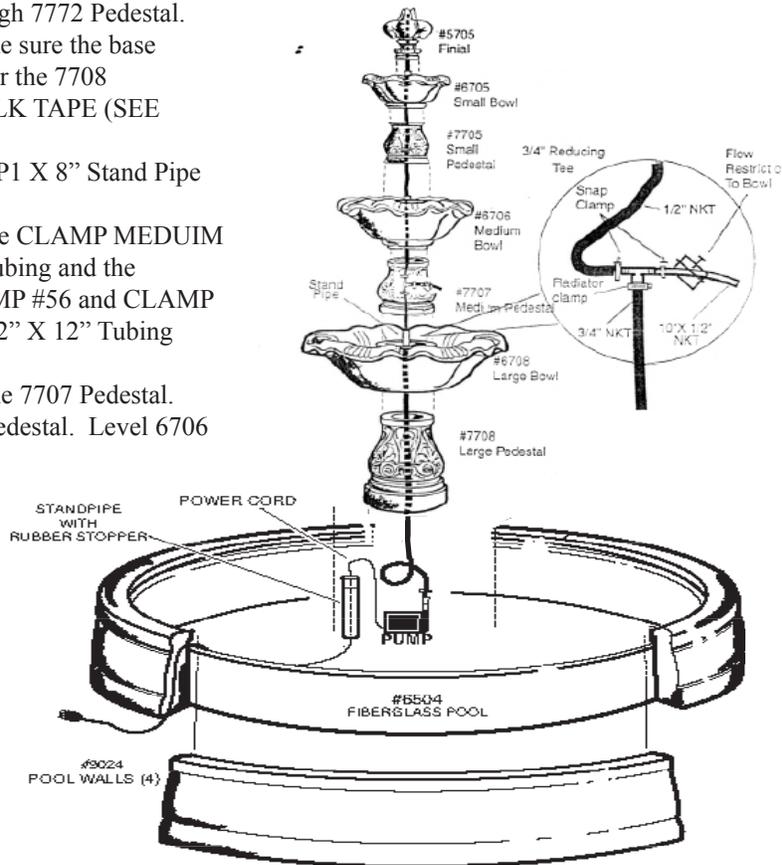

IMPORTANT - WINTER CARE:

Do not allow water to collect and freeze in fountain bowl(s) or shell(s). Do not allow fountain pieces to sit in a pool of ice. Disassemble entire fountain and pump and store indoors during the winter season.

If you cannot store your fountain indoors during the winter season, you must at least protect it from ice collection or exposure: first, remove the statue(s) and pump, storing them inside if possible. Next, locate the drain plug on the underside of bowl(s) or shell(s). Remove the drain plug to drain any water "trapped" between the walls of the bowl(s) or shell(s). Then fill the bowl(s) or shell(s) with an absorbent material, such as burlap, blankets, etc. Finally, cover the entire fountain with a Henri Fountain Cover. Should condensation droplets form on the inside of the cover, the material will absorb them.

By following these simple and sensible precautions during the winter season, you will protect your fountain for years of beauty and enjoyment!

CAUTION: The use of Chlorine or Chlorine Bleach may damage the finish of your fountain. When cleaning your fountain, it is best to test the cleaning agent on an underside or back surface to determine the agent's suitability. We recommend the use of a mild, non-abrasive treatment, such as Henri Lime Remover and Preventer. To avoid foaming, thoroughly rinse the fountain to remove the entire cleaning agent.